



Installation & Operating Manual



IQ30-SBS178W/BL/X

Side By Side Fridge Freezer, White, Black, Inox



Please read these instructions carefully before attempting to install or use this appliance.
It is advisable to keep these instructions in a safe place for future reference.

CONTENTS

Introduction	3
Safety	4
Product Introduction	7
Installation	8
Operation	10
Maintenance	15
Troubleshooting	17
Special for New European Standard	18
Guarantee	19

INTRODUCTION

Thank you for choosing this ICEKING appliance. It has been designed to give years of trouble-free use provided it is installed and maintained correctly.

Please read these instructions carefully before installing or using your appliance. It is advisable to keep your purchase and installation receipts with these instructions in a safe place for future reference.

Included is some important safety information in addition to guidelines and recommendations that will enable you to take full advantage of all the functions available.

This quality appliance has been tested and certified to meet all applicable UK electrical and safety standards.

This appliance must be installed and connected in accordance with current regulations by a qualified electrician.

After unpacking the appliance ensure that there is no visible damage. If the appliance has been damaged during transit, do not use it, contact your retailer immediately.

Before using the appliance make sure that it is left to stand for 4 hours before first use.

How to register your guarantee and in the unfortunate case of failure contact for service please see the rear of this manual for details.

We continuously try to improve our products for the benefit of our customers. For this reason we reserve the right to make changes to any product at any time, without notice.

SAFETY

⚠ CAUTION: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, with which is nevertheless flammable.
- During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.
- The refrigerant (R600a) is flammable.

Symbol ISO 7010 W021 Warning;
Risk of fire/flammable materials!



- ⚠ WARNING:** The appliance must be positioned so that the plug is accessible.
- ⚠ WARNING:** If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person to avoid any hazards.
- ⚠ WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- ⚠ WARNING:** Do not use mechanical devices or

other means to accelerate the defrosting process, other than those recommended by the manufacturer.

- ⚠ WARNING:** Do not damage the refrigerant circuit.
- ⚠ WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- ⚠ WARNING:** This unit uses R600a as the refrigerant and cyclopentane as the foaming agent, both of these materials are easily burnt, when discarding the unit it should be kept away from sources of extreme heat.
- ⚠ WARNING:** Danger of electrical shock, the unit is used yellow-green grounding wire of this appliance must be grounded before operation.
- ⚠ WARNING:** When the refrigerator is discarded after use please follow all local laws and regulations.
- ⚠ WARNING:** The refrigerant and insulation blowing gas are flammable. Disposing of the refrigerant can only be done at authorized waste disposal centres. Do not expose the refrigerant or insulation to extreme heat or an open flame.
- ⚠ WARNING:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- ⚠ WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- ⚠ WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance. Do not connect the appliance to an extension lead or adapter.
- ⚠ WARNING:** To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.

SAFETY

- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.
- One-, two- and three-star compartments are not suitable for the freezing of fresh food.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- ⚠ WARNING:** Risk of child entrapment. Before you throw away your old refrigerator or freezer: Take off the doors.-Leave the shelves in place so that children may not easily climb inside.
- ⚠ WARNING:** Before performing any type of installation or cleaning, disconnect the refrigerator from the power source and reset the temperature controls to the desired setting(s). When you are finished, reconnect the refrigerator to the electrical source and reset the temperature controls to the desired setting.
- ⚠ WARNING:** This appliance is intended to be used in household and domestic applications only!

⚠ IMPORTANT NOTE: This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product, or on the documents accompanying the product, the Crossed Out Wheelie Bin, indicates that this appliance may not be treated as household waste.



Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this product, please contact your local authority, your household waste disposal service or the retailer where you purchased the product.

SAFETY & WARNING INFORMATION

This guide contains many important safety messages. Always read and obey all safety messages.


- ⚠** This is the safety alert symbol. It alerts you to warnings that will inform you of any potential hazards that could hurt or kill you. These messages will also help protect your unit from damage. All safety messages will be preceded by the safety alert symbol and the hazard signal word DANGER, WARNING or CAUTION. These words mean:
- ⚠ DANGER:** You could be killed or seriously injured if you don't follow the instructions.
- ⚠ WARNING:** You may be killed or seriously injured if you don't follow the instructions.
- ⚠ CAUTION:** Indicates an imminently hazardous situation which if not avoided, may result in minor or moderate injury or product damage only.

Appliance connection

- ⚠ CAUTION:** This product is applicable to 220-240V/50Hz only, and the allowable voltage fluctuation range is 187V-242V. It can not be used if the voltage frequency is not 50Hz.
- In order to ensure safety, the socket and its cable must be able to withstand the current of above 10A.

LED Light

Replaceable (LED only) light source by a professional. This product contains two light sources of energy efficiency class F.

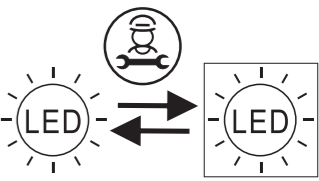

SAFETY

Safety & Warning Information

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.

If you believe there is refrigerant leaking, do not touch the unit or the power outlet, ventilate the room and if possible turn your unit off using the circuit breaker. Call the manufacturer immediately.

Refrigerant will cause serious injury when coming into contact with the skin or eyes. If this happens please immediately seek out medical treatment.

Make sure to use a grounded power outlet. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

Wait for 5 minutes or longer before reconnecting the power cord. Failure to do so may cause the freezer to fail.

The incorrect grounding may cause breakdown and/or electric shock.

A dedicated outlet should be used. Using several devices at one outlet may cause fire.

Do not allow the power plug to face upward or to be squeezed at the back of the fridge. Water may be flown into or the plug may be damaged, which can cause fire or injury.

Do not allow the power cord to be bent, or pressed by heavy objects, that may cause damage.

Unplug the power cord when cleaning, handling the interior lamp of the fridge. Failure to do so may result in a electric shock or other injury.

Remove water or dust from the power plug with a dry clean cloth, do not use wet hands to touch it and insert it with the ends of the pins securely connected.

Do not use the fridge for non-domestic purposes (storing medicine or testing material, blood, using on a ship, etc). It may cause an unexpected risk such as fire, electric shock,deterioration of stored material or chemical reaction.

Do not use or store inflammable materials ether, benzene, alcohol,medicine, liquid propane gas, spray or cosmetics near or in the fridge. It may cause explosion or cause a fire.

Do not put any glassware that is not design for use in a fridge or freezer inside. The glass may crack or break which can lead to injury.

Do not place heavy, or dangerous objects such as: cups, flower vases, cosmetics, medicines or any containers with water in the fridge. It may be dropped and cause injury, fire or electric shock when opening or closing the door.

Do not touch food or containers in the freezer with wet hands. It may cause frostbite.

Do not spray water on the outside or the inside of the fridge, do not clean it with benzene or thinner.

Do not clean the unit with any acidic cleaners, abrasive brushes, sharp tools, and/or any cleaner that contains benzene.

Do not use a drier to dry the inside of the unit, nor light a candle to remove odour. It may cause an explosion or fire.

Do not cling to the door or the trays of the door. It may make the fridge fall down and cause serious injuries or even death.

Especially, do not allow the children to do the above.

Do not put ice in a thin crystal cup or ceramic ware. It may break cup or ceramic ware to cause injury.

Do not allow anyone except a qualified service person to disassemble, repair, or alter the fridge. Unless directed by the manufacturer. It may cause injury, electric shock or fire.

This appliance is intended to be used in household and domestic applications only.

Do not install the fridge in a wet or high humidity environment. Failure to do so will cause premature deterioration, cause the unit to run more frequently and can cause an electrical shock.

Install the appliance in a dry, well-ventilated room. The appliance should be placed close to the wall outlet, it is easy to cut off the power supply at the time of the accident.

SAFETY & PRODUCT INTRODUCTION

Do not expose the unit to extreme heat or any open flame. Keep your unit in a well ventilated area, make sure if the unit is built-in that there is adequate air flow around the unit.

Do not cover or obstruct the exhaust area on the back of the unit, it may cause electric shock or injury.

PRODUCT INTRODUCTION

Product Features

This unit container super freeze, energy-savings, noise reduction, optimal refrigeration are pre-set options for your unit.

Precise temperature control

Microcomputer control systems are able to separately control both the fridge and freezer more accurately.

Automatic defrosting

This unit is equipped with a program that controls the frequency and duration of defrosting your freezer. This will make sure that you never need to manually defrost the freezer.

LED display and temperature controls

The control board respectively displays the fridge and freezer temperatures. To change the setting in either section simply press the up or down arrow depending on the chance you would like made.

Tempered glass

Tempered glass, is safe and reliable, easy to clean and durable.

Easy clean and removable door seal

The door seal(s) are easy to remove and clean, allowing the product to operate efficiently for longer.


Door-open alarm system

If you leave any of your doors open for longer than 1-minute the alarm system will remind you to close the door.

PRODUCT COMPONENTS

The layout of items below are subject to change without notice, and may not look or come setup as seen in the picture below.

The appearance and specifications of the actual product may differ depending on the model.

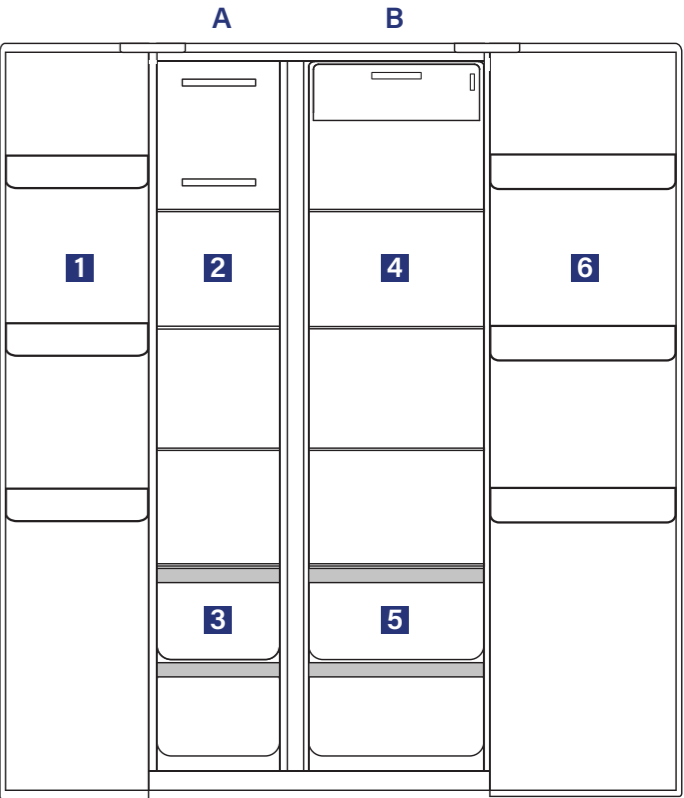


- A** Freezer compartment
- 1** Freezer door rack
- 2** Freezer glass shelves
- 3** Freezer drawer
- B** Refrigerator compartment
- 4** Refrigerator glass shelves
- 5** Crisper
- 6** Refrigerator door rack

INSTALLATION

INSTALLATION DIMENSIONS

Select a good location to place your appliance where it is flat and easy to use. Avoid placing the unit near heat sources, direct sunlight or moisture.

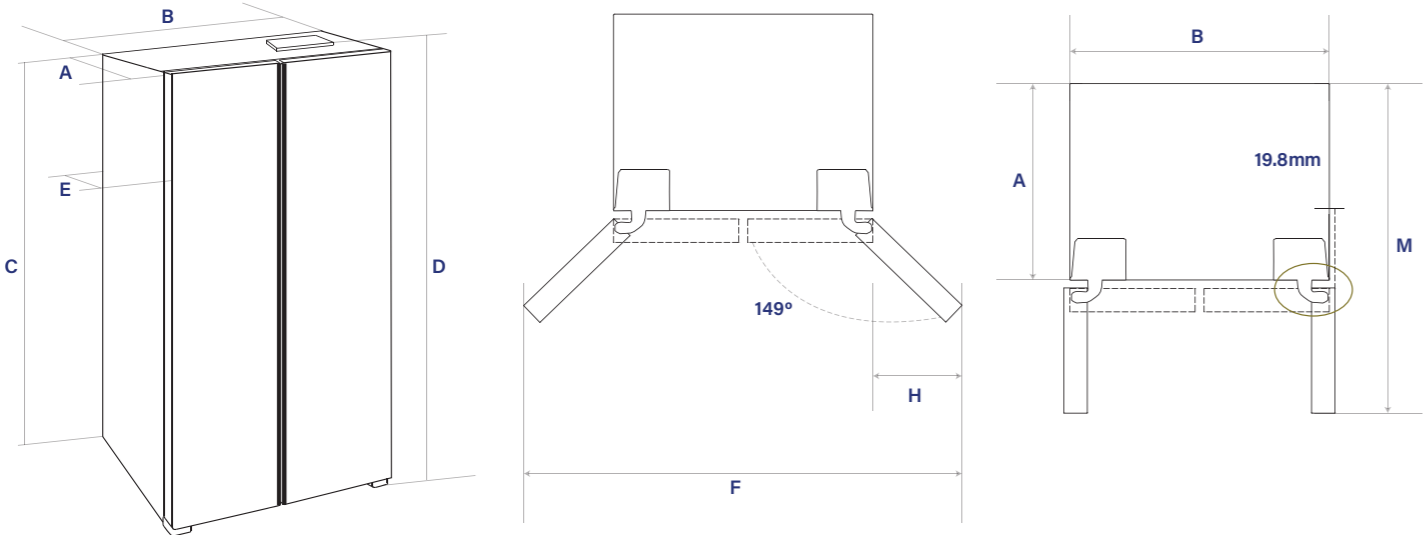

A	B	C	D	E	F	G	H
551	836	1726	1780	623	1521	382	1006

The above figures are a guideline for installation purposes. The actual dimensions of the unit may vary slightly.

To ensure that your unit works at peak efficiency please maintain sufficient space around your unit as outlined on the next page.

INSTALLATION

Transportation

Do not carry the refrigerator horizontally or by laying it down.

Do not carry the refrigerator by holding the door or handle; the refrigerator shall be carried by lifting the bottom.

This unit should never be moved alone, two people are required to safely lift or move your unit.


Where to install the appliance

The refrigerator must be placed on hard, flat ground; if cushioning is needed, stable, hard, non flammable cushion blocks shall be used.

DO NOT USE THE FOAM PACKAGING AS CUSHIONING BLOCKS!


The unit shall be kept away from damp locations where water is present. Water or dirt should be removed from any surface of the unit as soon as possible using a soft cloth. This will help prevent rust and will help your unit run at peak efficiency.

Place the refrigerator in a well-ventilated place, reserve a certain space around and behind the refrigerator, and do not cover or block the air grille on the rear cover plate of compressor at the back of refrigerator; Keep the refrigerator away from heat source or direct sunlight.

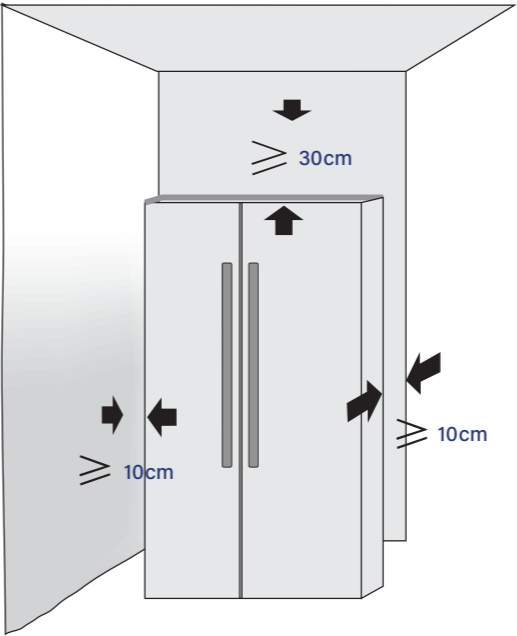


Adjustable plastic feet

When the refrigerator stays in the packing box, plastic feet are in tightened state. After carrying it out from the packing box for placement, please make sure to adjust two front plastic feet until the height is suitable; just adjust two plastic feet with a wrench or directly by hand.

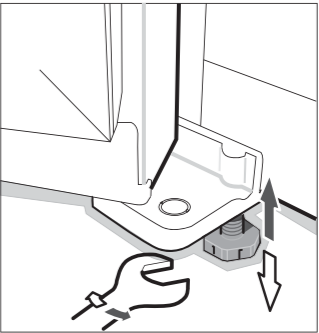

Plastic feet and rear rollers must touch the ground to prevent the refrigerator from movement, vibration or noise. When moving the refrigerator, adjust plastic feet counter clockwise to keep them off the ground, and then push the refrigerator gently to move it.

Door Shelf Guide

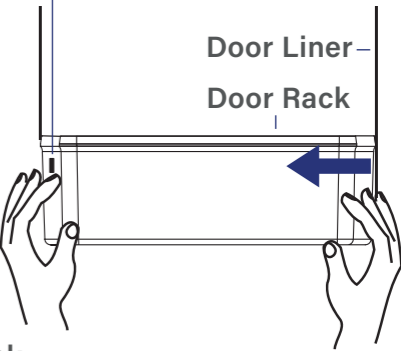

Door rack

Disassembly: Hold both sides of the door rack with both hands.

Push it from the side without the guide and push it inward as seen in the diagram. Push until the edge of the door rack is separated from the groove of the liner.

Installation: Hold both sides of the door rack with both hands.

Install the buckle of the guide side at first. Then push the other side inward slightly, the guide will then click into place and the door rack will be installed. Please make sure it is installed properly before use.

OPERATION

BEFORE USE

This refrigerating appliance is not intended to be used as a built-in appliance.

Remove all of the packaging, including the foam backing at the bottom of the unit and the tape that fixes the shelves and door bins inside.

Place the refrigerator to a proper position, and adjust the feet to level. It is recommended to wipe out your unit with a warm soapy cloth and dry it thoroughly before use.

Place the refrigerator and adjust to level, clean it, let the refrigerator stand for above 4-6 hours, and then power the unit on. This helps make sure that the oil from the compressor has settled properly, and will help your unit run normally.


STARTING

Connect the power cord, and turn on the power switch.

Upon startup for the first time, the screen will display respective set temperature values (the temperature of the fridge section is set to 3°C, the temperature of the freezer is set to -19°C).

The default mode is energy saving upon startup: The screen displays for 20s and then goes off. This mode to save energy and prolong the service life of LED lights.

CONTROL PANEL

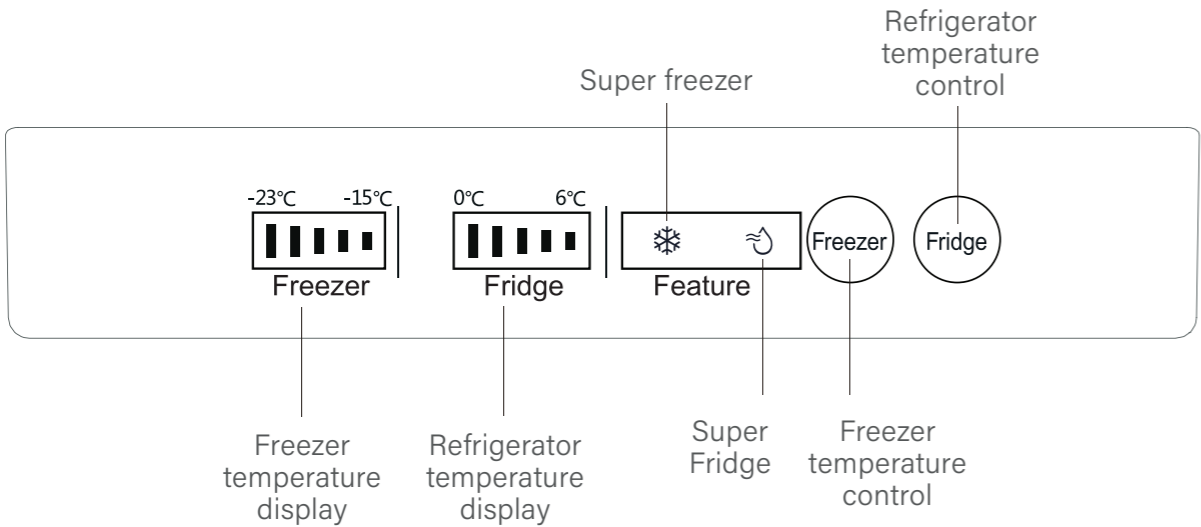


OPERATION

FREEZER COMPARTMENT SETTINGS

The default temperature of the freezer is -19°C. To change the temperature press the “Freezer” button to cycle through the set temperatures.

Freezer:

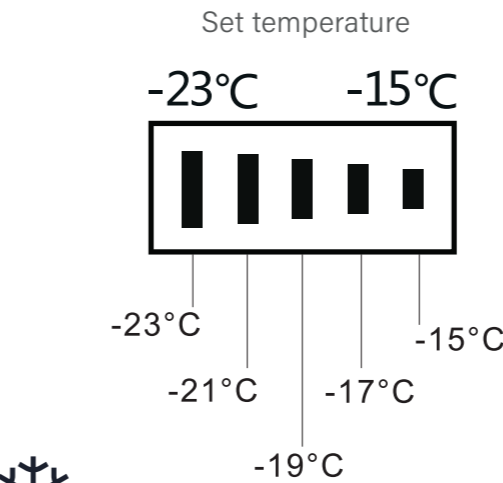

Super Freezer Mode:

When the freezer display area reaches the minimum temperature, press the “Freezer” button again to enter the super freezer mode.


When the super freezer mode is selected, the compressor will operate continuously to freeze foods faster and keep them fresh. The super freezer mode will automatically turn off either after 24h of operation, or when the freezer reaches -28°C. The super freezer icon will turn off, and the freezer will continue to operate at the normal set temperature.

⚠ CAUTION: Do not put fresh foods directly on frozen foods.

REFRIGERATOR COMPARTMENT SETTINGS

The default temperature of the refrigerator is 3°C. To change the temperature press the “Fridge” button to cycle through the set temperatures.

Refrigerator:

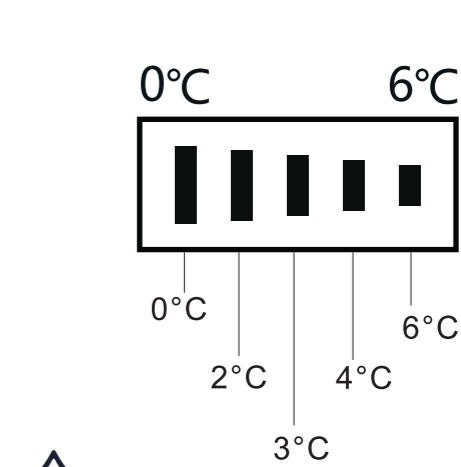

Super Fridge Mode:

When the fridge display area reaches the minimum temperature, press the “Fridge” button again to enter the super fridge mode.

When the super fridge mode is selected, the fridge compartment reaches the set temperature in the shortest period, in order to keep the food as fresh as possible under this mode the set temperature of the fridge compartment lock on 0°C. The program runs 150mins maximally then exits automatically, the super fridge icon goes out which represents the super fridge function is disabled and the set temperature returns to the last one before the super fridge mode was activated.


FRIDGE COMPARTMENT SWITCH ON/OFF

Long press “Fridge” button for 5-10 seconds to set fridge compartment on/off, when fridge compartment is switched off the fridge temperature digital display will go off; under the fridge compartment switched off state, long press “Fridge” button for 5-10 seconds to restart fridge function.

OPERATION

REFRIGERATOR CHAMBER

The fridge compartment should mainly be used to store food that will be consumed in a short time.

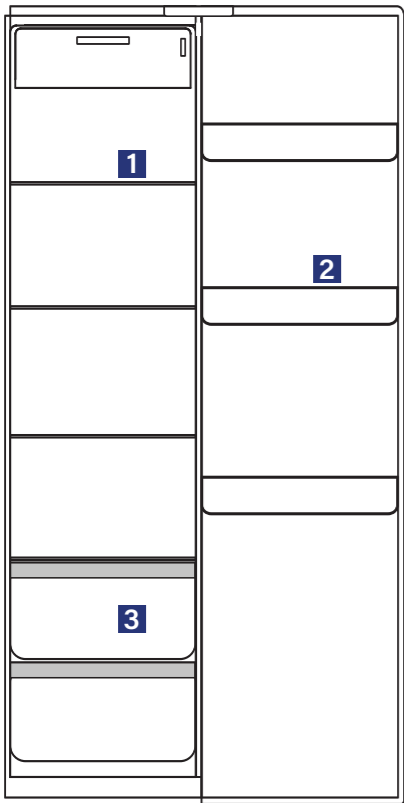


- 1 Refrigerator Glass Shelves
- 2 Refrigerator Door Rack
- 3 Crisper

The appearance and specifications of the actual product may differ depending on the model.

CAUTION: The food, especially the oily food which stored in refrigerator, please avoid direct contact with the liner. If the interior becomes stained with oil or oily food stains, it should be cleaned immediately to avoid long contact with the liner which may lead to corrosion or cracking.

FREEZER CHAMBER

The freezing chamber is used to freeze foods, store deeply frozen foods and make ice cubes. It can preserve foods for a long time.

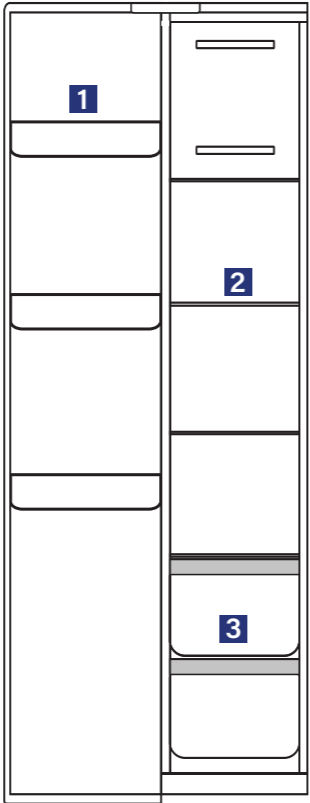

- 1 Freezer Door Rack
- 2 Freezer Glass Shelves
- 3 Freezer Drawer

Two-star (**) frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.

One star (*), two star (**) and three star (***) compartments are not suitable for the freezing of fresh food.

If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry and leave the door open to prevent mould developing within the appliance.

Please depend on the actual situation of the product.

OPERATION

INSTRUCTIONS FOR STORING FOODS

CAUTION:

- When storing freezing foods, put them to the inside of freezing chamber, other than the bottle rack.
- Do not put bottled or canned foods into the freezing chamber to prevent frost cracking. Before putting hot foods into the refrigerator, cool them to room temperature first; otherwise, they will increase power consumption.
- Mark the freezing date on the packaging bag according to different storage lives of foods, so as to prevent foods from exceeding the time limit.
- Divide foods into proper pieces and package them separately, which are easy to freeze thoroughly and will not freeze together.
- The packaging materials shall be odorless, airtight, watertight and pollution-free, so packaged foods are not easy to taint by other odor, without quality reduction.
- Do not put too many fresh foods into the freezing chamber once, preferably not exceeding the freezing capacity value of refrigerator.
- Melted foods can not be frozen again, unless they are made into dishes; otherwise, their service quality will be affected.
- Glass bottles or glass containers shall not be placed into the freezing chamber or at the air outlet of refrigerating chamber duct; otherwise, they may explode.
- Foods can not block the air outlet; otherwise, abnormal air circulation will be caused.

STORAGE OF FOODS

Your appliance has the accessories as the "Structure illustration" showed in general, with this part instruction you can have the right way to storage your food. The glass shelves and crisper can be removed to store food if needed.

Note: Food is not allowed to touch directly all surfaces inside the appliance. It has to be wrapped separately in aluminum sheet or in cellophane sheet or in airtight plastic boxes

Precautions for internal and external cleaning of refrigerator:

Before cleaning, always turn off the power switch, disconnect the power plug. During cleaning, make sure that no water will enter the switch, control panel, door lamp and top control box.

Remove dirt from the outside of refrigerator with mild cleaner, then wipe with clean soft cloth, and let the refrigerator dry naturally.

When cleaning door sealing strip, always use clean water, wipe with dry cloth and let it dry naturally. Wet soft cloth with warm water or neutral cleaner to wipe the refrigerator body except the door sealing strip.

It is forbidden to flush the refrigerator directly with water, which will affect electrical insulation properties, etc.

Dairy foods and eggs

Most pre-packed dairy foods have a recommended 'use by/best before/best by/ date stamped on them. Store them in the fridge compartment and use within the recommended time. Butter can become tainted by strong smelling foods so it is best stored in a sealed container. Eggs should be stored in the fridge compartment.

Red meat

Place fresh red meat on a plate and loosely cover with waxed paper, plastic wrap or foil. Store cooked and raw meat on separate plates. This will prevent any juice lost from the raw meat from contaminating the cooked product.

Poultry

Fresh whole birds should be rinsed inside and out with cold running water, dried and placed on a plate. Cover loosely with plastic wrap or foil. Poultry pieces should also be stored this way. Whole poultry should never be stuffed until just before cooking, otherwise food poisoning may result.

OPERATION

Fish and seafood

Whole fish and fillets should be used on the day of purchase. Until required refrigerate on a plate loosely covered with plastic wrap, waxed paper or foil. If storing overnight or longer, take particular care to select very fresh fish.

Whole fish should be rinsed in cold water to remove loose scales and dirt and then patted dry with paper towels. Place whole fish or fillets in a sealed plastic bag. Keep shellfish chilled at all times. Use within 1-2 days.


Precooked foods and leftovers

These should be stored in suitable covered containers so that the food will not dry out. Keep for only 1-2 days. Reheat leftovers only once and until steaming hot.

Vegetable container

The vegetable container is the optimum storage location for fresh fruit and vegetables. Take care not to store the following at temperatures of less than 6°C for long periods: Citrus fruit, melons, aborigines, pineapple, papaya, curette, passion fruit, cucumber, peppers, tomatoes. Undesirable changes will occur at low temperatures such as softening of the flesh, browning and/or accelerated decaying.


Do not refrigerate avocados (until they are ripe), bananas and mangoes.

 **Note:** Food is not allowed to touch directly all surfaces inside the appliance. It has to be wrapped separately in aluminum sheet or in cellophane sheet or in airtight plastic boxes.

Food	Location (Refrigerator chamber)
Butter, cheese	Upper door rack
Eggs	Door rack
Fruit, vegetables, salad	Crisper
Meat, sausage, cheese, milk	Lower area (lowest shelf 1 crisper cover)
Dairy products, canned food, cans	Upper area or door rack
Drinks, bottles, tubes	Crisper
Food	Location (Freezer chamber)
Small frozen food	Door rack
Packaged frozen foods	Freezer drawer
Fish, meat, ice cream	Lower area (lower shelf or drawer)

Freezing and storing food in the freezer compartment

- To store deep-frozen food
- To make ice cubes
- To freeze food

 **Note:** Ensure that the freezer compartment door has been closed properly.

Purchasing frozen food

- Packaging must not be damaged
- Use by the 'use by /best before/best by/' date
- If possible, transport deep-frozen food in an insulated bag and place quickly in the freezer compartment.

Storing Frozen Food

Store at -18°C or colder. Avoid opening the freezer compartment door unnecessarily. Freeze fresh and undamaged food only.

To retain the best possible nutritional value, flavour and colour, vegetables should be blanched before freezing. Aubergines, peppers, zucchini and asparagus do not require blanching.

OPERATION & MAINTENANCE

The following foods are suitable for freezing:

Cakes and pastries, fish and seafood, meat, game, poultry, vegetables, fruit, herbs, eggs without shells dairy products such as cheese and butter, ready meals and leftovers such as soups, stews, cooked meat and fish, potato dishes, souffles and desserts.

The following foods are not suitable for freezing:

Types of vegetables, which are usually consumed raw, such as lettuce or radishes, eggs in shells, grapes, whole apples, pears and peaches, hard-boiled eggs, yogurt, soured milk, sourcream, and mayonnaise.

Recommended storage times of frozen food in the freezer compartment

These times vary depending on the type of food. The food that you freeze can be preserved from 1 to 12 months (minimum at -18°C).

Food	Storage time
Bacon, casseroles, milk	1 month
Bread, ice cream, sausages, pies, prepared shellfish, oily fish	2 months
Non-oily fish, shellfish, pizza, scones and muffins	3 months
Ham, cakes, biscuits, beef and lamb chops, poultry pieces	4 months
Butter, vegetables (blanched), eggs whole and yolks, cooked crayfish, minced meat (raw), pork (raw)	5 months
Fruit (dry or in syrup), egg whites, beef (raw), whole chicken, lamb (raw), fruit cakes	12 months

MAINTENANCE

Defrosting

This production has automatic defrosting function, without manual operation.

Cleaning

Precautions for internal and external cleaning of refrigerator:

- Before cleaning, always turn off the power switch, disconnect the power plug.
- During cleaning, make sure that no water will enter the switch, control panel, door lamp and top control box.
- Remove dirt from the outside of refrigerator with mild cleaner, then wipe with clean soft cloth, and let the refrigerator dry naturally.
- When cleaning door sealing strip, always use clean water, wipe with dry cloth and let it dry naturally. Wet soft cloth with warm water or neutral cleaner to wipe the refrigerator body except the door sealing strip.
- It is forbidden to flush the refrigerator directly with water, which will affect electrical insulation properties, etc.
- It is forbidden to clean the refrigerator with metal wipers, wire brushes, coarse abrasive cleaners, strong alkaline detergents, or flammable or toxic cleaning fluids.

After cleaning, connect the power plug of refrigerator, and connected with the refrigerator.

General Information

On Vacation

When you leave for vacation it is better to leave the refrigerator to operate continuously leaving foods that can be stored for the required vacation time. If you want to turn off the appliance, remove all foods, disconnect the power plug, clean the inside of refrigerator fully, and open the door to avoid producing abnormal odors.

MAINTENANCE

Power Failure

Generally, short-term power failure will not affect the temperature of the refrigerator sharply. However, if power failure lasts for a long time, you shall reduce the opening frequency of refrigerator, and shall not put fresh foods into the refrigerator (prevent rise in the temperature of refrigerator from speeding up).

If you know power failure is coming, you can turn on the “Super Freezer” function in advance to keep the temperature of refrigerator to the lowest value.

Shutdown

Generally, it is not suggested to stop refrigerator or turn off the power switch; otherwise, the life of refrigerator may be affected.

Energy Saving Tips

- Make sure to keep the refrigerator away from heat source and direct sunlight.
- Before storing hot foods, cool them to room temperature and then put into refrigerator.
- Close the door timely, reduce the opening frequency, and shorten the opening time.
- When defrosting frozen foods, you can put them into the refrigerating chamber, which will assist in refrigeration of the refrigerating chamber.
- Make sure that the temperature sensor is not covered or blocked by foods,and keep proper distance with foods.

Standard Operation

Button failure

Please check the control board whether the fridge under lock mode. When under lock mode, all buttons can’t work.

Low voltage, the compressor can’t start

You should purchase pressurizer of more than 1000W when the area of the appliance installation,that’s better to protect your fridge.

Long time to start

When the ambient temperature too high, it will take long time to start the appliance.

Middle beams feel hot

Middle beams feel hot after a period of time of the appliance running, this is part of standard operation.

Dew drops

When external air flows into the cool inner surface of the fridge, dew drops can be formed. If the humidity of the installed location is high or during the rainy season,dew drops can form on the outer side of the fridge. This standard operation that occurs during the humid weather, Wipe the water drops with a dry cloth.

Noise

When you operate the fridge for the first time, the fridge will operate at high speed to cool fast and the sound can seem louder. When the internal temperature falls below a certain level, the noise will subside.

When the operation of the compressor is starting or ending; various parts expanding/contracting or various control devices operating or temperature change within the fridge, you will hear the sounds,these are normal sounds.

Compressor - hot

When working, the temperature of the compressor outer can be more than 80℃, please do not touch the compressor, it may cause serious injury.

Compressor - long time running

When the ambient temperature too high or put too much fresh foods into the fridge, it will take long time to cool down until the appliance run at the setting temperature.

TROUBLESHOOTING


Troubleshooting

Before calling for service, review this list. It may save you both time and expense. This list includes common occurrences that are not the result of defective workmanship or materials in this appliance.

Fault	Possible Cause	Remedial Action
No display on the display panel	The mains plug of the appliance is not in the socket properly	Check wheather the power is on.
Alarm sound	Door is slightly open or not closed more than 1 minute	Close the door completly
The compressor do not work	It’s under defrosting mode	It’s normal for defrosting
	Power is not connected well	Check whether the power is connected well
Compressor runs too long	The fridge has recently been disconnected for a perios of time	It takes some hours for the fridge to cool down completely
	Put too much fresh or hot food	Hot food will cause the fridge to run longer until the desired temperature is reached
	Door are opened too frequently or too long	Warm air entering the fridge cause it to run longer. Open the door less often
Vibrating noise	Floor in uneven or weak	Be sure floor is level and solid and can adequately support fridge
	Items placed on the top of the fridge are vibrating	Remove items
	Fridge is touching wall or cabinets	Move fridge so that does not touch the wall or cabinets

Climate Class:

- Extended temperate (SN): ‘this refrigerating appliance is intended to be used at ambient temperatures ranging from 10°C to 32°C’;
 - Temperate(N): ‘this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C’;
 - Subtropical(ST): ‘this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 38 °C’;
- Tropical(T): ‘this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C’;

 **Note:** More data information, please scan the QR code on the energy label.

SPECIAL FOR NEW EUROPEAN STANDARD

Special for New European Standard

The parts in the following table can be acquired from customer services.

Part	Provided By	Minimum Time Required for Provision
Thermostats	Professional maintenance personnel	At Least 7 years after the last model is launched on the market
Temperature Sensor	Professional maintenance personnel	At Least 7 years after the last model is launched on the market
Printed Circuit Board	Professional maintenance personnel	At Least 7 years after the last model is launched on the market
Light Source	Professional Repairers & Final Users	At Least 7 years after the last model is launched on the market
Door Handles	Professional Repairers & Final Users	At Least 7 years after the last model is launched on the market
Door Hinges	Professional Repairers & Final Users	At Least 7 years after the last model is launched on the market
Trays	Professional Repairers & Final Users	At Least 7 years after the last model is launched on the market
Baskets	Professional Repairers & Final Users	At Least 7 years after the last model is launched on the market
Door Gaskets	Professional Repairers & Final Users	At Least 10 years after the last model is launched on the market

Product Data Sheet concerning (EU) 2019/2019

The product data sheet for your appliance can be found online if you wish to download a copy.

Go to **eprel.ec.europa.eu** and enter the model identifier for your appliance to download the data sheet.

Alternatively you can download from:

www.ice-king.co.uk

...by going to the relevant product page.

The model identifier for your appliance can be found on the rating plate at the rear/inside of the appliance.

GUARANTEE



THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS

Your new Iceking appliance carries a free guarantee which protects you against the cost of repairs during the first 24 months from date of purchase provided that any claim is accompanied by evidence of the model reference, model serial number and proof of purchase, such as a Sales Receipt, showing that the appliance was purchased within the 24 months prior to the date of claim.

YOUR GUARANTEE IS VALID ONLY IN THE UK & REPUBLIC OF IRELAND

To register your appliance, simply complete the card in your appliance pack and return it with a stamp affixed or alternatively you can register online at **www.appliancesupport.co.uk/iceking**

Service Helpline

Should your appliance develop a fault, please call the Iceking Service Helpline on: **0330 025 0179**

Please remember to have all your product details available, including the model number, serial number, date of purchase and your retailer's details before registering a fault.

Your service call cannot progress without this information.



GUARANTEE

What your guarantee does not cover

- Cost of call out where a fault cannot be found with the appliance.
- Cost of callout for work covering routine maintenance, such as, but not exclusively, cleaning of filters or defrosting.
- Cost of callout for work required to correct the alignment of doors following door reversal procedures carried out by you.
- Use of the appliance by anyone other than the Householder.
- Use in any non-domestic environment.
- Consumable items, such as, but not exclusively, fuses in plugs, bulbs and breakable items which require routine replacement.
- Cosmetic parts such as, but not exclusively, shelves, drawers, door balconies.
- Repair costs incurred that have not been authorised by Icking and/or carried out by a non-approved Icking engineer.

Insurance

Any guarantee provided with this product does not cover loss of fridge/freezer content.

Any claim for loss, damage, costs or expenses of an indirect or consequential nature including any economic loss or damage to foodstuffs or any other goods is excluded. We recommend that you inspect your fridge/freezer regularly to check that it is working correctly, losses can result from deterioration following breakdown or accidental failure of the appliance, fuses, plugs or public electricity supply, these can be covered by your standard home insurance or might require extra cover. Check with your insurance provider.

NOTES

NOTES

NOTES



Henry John House,
Northway Industrial Estate,
Northway Lane,
Ashchurch,
Tewkesbury,
Gloucestershire.
GL20 8JH

 **ICEKING**

T 0330 025 0179

E enquiries@ice-king.co.uk

ice-king.co.uk